 


PIPE STRAIGHTNESS GAUGE



GUIDE LENGTH (L) CAN
BE CUSTOMIZED

DATA
OUTPUT

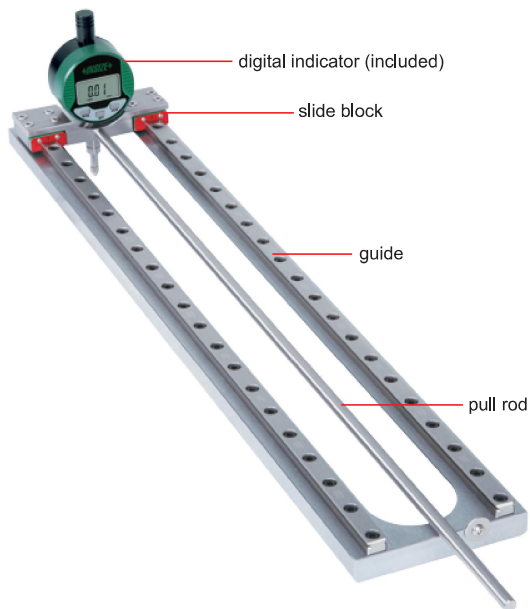


2226-400

- Measure inner wall straightness of pipes
- Bottom function:
on/off, zero, data preset, change measuring direction,
inch/mm, absolute/incremental measurement,
max./mix./TIR measurement
- Keep preset data in memory after restart
- CR1632 battery, automatic power off
- Data output
- Optional accessory:
wireless transmitter code **7315-50M** (receiver is needed)

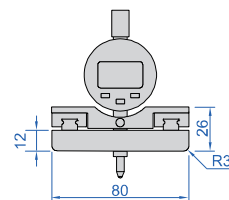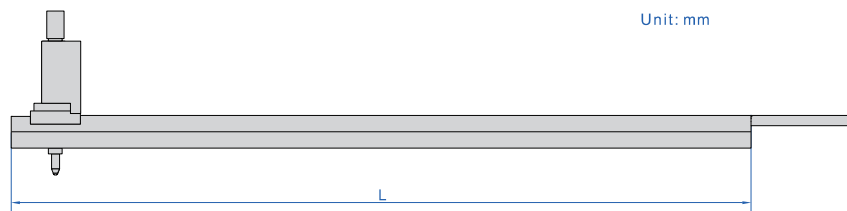

application

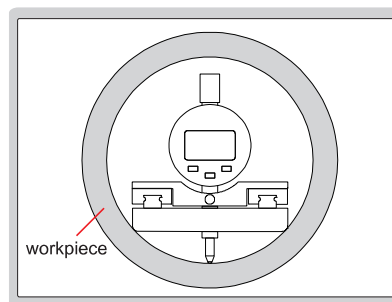

Code	Measuring range	Inner diameter of measured bore	Resolution	Straightness accuracy	L
2226-400	400mm	100-250mm	0.01mm/0.0005"	0.05mm	430mm